USB Rechargeable Mobile Fan
Instruction Manual

Thank you for purchasing this product. Please read this manual carefully before use to ensure correct operation. After reading, keep it in a safe place for future reference.

Manufacturer/Distributor
King Printers Co., Ltd.
2-10-21 Chibune, Nishiyodogawa-ku, Osaka 555-0013
https://kingprinters.com/

Warranty Card

Fields with * to be completed by retailer

*Product name/model

*Warranty period: 1 year from _____ / ____ / ____ (purchase date)

Customer details

Name

Address

Phone number

*Retailer stamp
(Store location, name, and phone number)

Product Specifications

Battery life	Approx. 300 charge cycles	Power indicator lamp	White LED
Charging time	Approx. 6 hours	Charging indicator lamp	Red LED
Continuous operation time		Solid: Charging	
Low: Approx. 10 hours		Flashing: Low battery warning	
Medium: Approx. 5 hours			
High: Approx. 2 hours		Size of main unit	H214xW85xD40
Turbo: Approx. 30 minutes		Weight	Approx. 150 g

Accessories: USB cable (×1), Strap (×1), Instruction Manual/Warranty Card (This document)

Warranty

If a failure occurs within the warranty period under normal use according to the manual, the product will be repaired free of charge (if repairable). Please bring the product and this warranty card to the retailer where it was purchased.

Please ensure the fields marked with * are filled in and stamped, and keep this card in a safe place.

- This warranty does not limit the legal rights of the warranty holder.
- Information on after-sales service, such as the parts retention period, is included in this manual.
- This warranty is valid only in Japan.

■ For Retailers

This warranty card is intended to clarify the responsibility and implementation of after-sales service for the customer. This does not apply if your store issues its own separate warranty.

After-Sales Service

Please read the following information and the warranty card carefully. A valid warranty card is required for service during the warranty period.

● Availability of Replacement Parts

Functional parts for repair (circuits and motors) are generally kept in stock for 5 years after production has been discontinued. Depending on the type of repair required, the entire product may be replaced instead.

● Repair Period

Even after the free warranty period has expired, paid repairs are generally possible as long as functional parts are in stock.

Service and technical support for this product are available only within Japan.

Contact Information

Customer Service Center
0120-000-000 *Toll-free within Japan*

Hours: 9:00 AM – 5:00 PM
(Excluding Saturdays, Sundays, public holidays, and company holidays)

Safety Precautions

The following instructions are intended to prevent harm to the user or others and to avoid property damage. Please follow these precautions strictly.

Symbols: "⊗" indicates an action that must NOT be done.
"❗" indicates a caution that MUST be adhered to.

DANGER Indicates an imminent risk of death or serious injury.

- ⊗ Do not use the product in the following locations:
  - Near heaters, stoves, or open flames.
  - Near flammable substances such as thinners or gas.
- ⊗ Do not insert metal objects such as wires into the charging port. Doing so may cause fire or electric shock.

WARNING Indicates a potential risk of death or serious injury.

- ⊗ Do not point the product toward open flames.
- ⊗ Do not disassemble or modify the product.
- ❗ Do not use the product if it is damaged or malfunctioning.
- ❗ Do not touch leaking battery fluid with bare hands.

CAUTION Indicates a potential risk of minor injury or physical damage to property.

- ⊗ Do not insert fingers or foreign objects inside the product.
- ⊗ Do not use chargers or peripherals that exceed 5 VDC during charging.
- ❗ Do not drop the product or subject it to strong impacts.
- ⊗ Do not use the product in the following locations:
  - Locations subject to direct sunlight
  - Near strong magnetic fields
  - Areas with exposure to rain or water droplets

Product Disposal

Li-ion

Lithium-ion batteries are recyclable. When disposing of the product, remove the lithium-ion battery and take it to a participating recycling center. For the disposal of the main unit, please follow the regulations of your local municipality.


Removing the Rechargeable Lithium-ion Battery

The product is designed so that it cannot be reassembled once taken apart. Do not remove the battery except when disposing of the product.

Ensure the battery is completely discharged before removal.


1. Remove the four screws on the back of the main unit.

Use a Phillips screwdriver to remove the four screws on the back. Two screws are located at the base of the fan head, and two screws are located under the cushions near the carabiner.

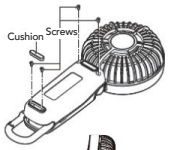

2. Separate the front and back covers.


After removing the four screws, separate the front and back covers. The handle is held together by two internal tabs. Pull firmly from the carabiner side to snap the covers apart.

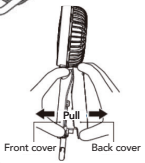

3. Lift the battery and disconnect the connector.

The battery is secured inside the handle under the front cover with double-sided tape and may require some force to peel off. If possible, unplug the connector before peeling the battery.

* To unplug the connector, pinch the connector and the top of the connector tab and pull upward.

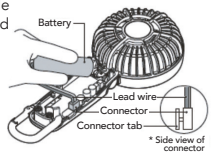


4. Take the battery to a recycling center.

Cover the battery connector with electrical tape or similar material to insulate it.


DANGER

- **Do not allow anyone unfamiliar with using tools to remove the battery.**
  Doing so may result in injury.
- **If battery fluid leaks and contacts your eyes or skin, rinse immediately with clean tap water and seek medical attention.**
  Exposure to the eyes can cause permanent damage.

Part Names and Functions

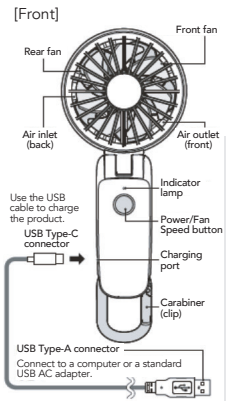

Handling the USB Connector



CAUTION

- Do not use any USB cable other than the one provided. Do not use the included cable with other devices.
- Check that the USB connector is correctly oriented before inserting it.
- Check that the USB connector is correctly oriented before inserting it.
- Do not use the USB cable if it is damaged.

Maintenance and Care

- Ensure the power is off and the USB cable is disconnected before cleaning.
- To clean heavy dirt, wipe with a soft cloth slightly moistened with mild detergent or soapy water. Wipe dry with a clean cloth immediately after.

WARNING Do not wash the product with water or allow the product to get wet.

CAUTION Do not clean the product while it is in use or charging.

Operating the Power/Fan Speed Button

Terminology	Action	Function
Short press	Press and release immediately (less than 1 second)	Cycles through fan speeds.
Press and hold (1 second)	Pres and hold for approx. 1 second,then release	Turns the power on or off

How to Use

Always charge the battery before using the product for the first time or after a long period of disuse.
Due to the characteristics of rechargeable batteries, the charge will naturally decrease over time even when not in use.

1. Charging the Product

When the fan is running and the battery is low, the indicator lamp will flash red. If the lamp flashes red, turn the power off and connect the included USB cable to a power source, such as a computer or a standard USB AC adapter.

Power/Fan Speed Button & Charging Status

Power/Fan Speed button	OFF	Low	Medium	High	Turbo
Charging status	Full charge in approx. 6 hours	May cause heat or battery damage		No charging during use; all power is used to run the fan	

* If High or Turbo mode is used while charging, or if the charging cable is connected while the product is in High or Turbo mode, the fan will stop within 10 minutes to protect the circuit.

Indicator Lamp Colors

- Solid white: The fan is running.
- Flashing red: See the instructions below.

When running on battery (USB cable disconnected)
Flashing once every 5 seconds: Low battery. Charge as needed.
Flashing twice every 5 seconds: Very low battery. Charge soon.
Flashing twice every 5 seconds: Very low battery. Charge soon.
Solid red: Charging

2. Operating the Fan

Press and hold the Power/Fan Speed button for 1 second to turn on the power. Press the button again to switch between Low, Medium, High, and Turbo mode.

◆When the power is turned on by pressing and holding the Power/Fan Speed button for 1 second, the fan starts at Low speed.



◆Pressing and holding the Power/Fan Speed button for 1 second again will turn off the power, regardless of the current fan speed.

●If the fan does not rotate even after charging, the motor or rechargeable battery may have reached the end of its service life.

Precautions for Charging

Charge within an ambient temperature range of 10°C to 40°C.


WARNING ●If the area near the rechargeable battery becomes too hot to touch, stop using the product immediately.

CAUTION ●Do not charge using a USB hub.
●The product may not operate correctly if used simultaneously with high-power-consumption devices.

Using the Strap

The included strap can be attached to the carabiner on the product.

○How to Attach the Strap



◆When hanging the product from the neck, be sure to hang it from the opening that includes the strap connector and adjuster.

◆When attaching the strap to the carabiner, ensure the connector and the adjuster are in the correct positions.

◆When using a commercially available strap, choose one with a load capacity suitable for the product's structure and weight.

WARNING ●Do not apply excessive force to the strap such as by pulling it strongly or using the strap to swing the product. There is a risk of suffocation or injury if the strap gets caught around the neck or body.

CAUTION ●Do not pull on the included strap with a strong force.
●Do not allow the strap or other strings near the fan, and do not cover the fan with cloth.
●Do not use the included strap for other products.

Adjusting the Fan Angle

The fan head can be freely adjusted within a range of up to approximately 110°.



◆When using the fan on a surface, place it in a stable, level location with minimal vibration. Dust or debris on the cushion on the bottom may cause the product to move due to vibration. Regularly remove any dust from the cushion.

CAUTION ●Do not apply excessive force to the fan head when adjusting the angle.
●When adjusting the angle, hold the handle firmly and be careful not to pinch your fingers between the fan head and the main body.

Using the Carabiner



◆Do not pull strongly on the product or apply a heavy load after attaching the carabiner.

◆Do not use the carabiner for any purpose other than attaching the product, such as hanging or transporting other items.

Precautions for Use

1. Connecting this product to a computer simultaneously with other USB-powered devices (such as external hard drives or mobile phones) may damage the computer.
2. Do not use USB AC adapters or USB output devices with a voltage exceeding 5 VDC.
3. Do not forcibly stop the fan blades while the power is on.
4. Do not use the product if the fan blades are damaged.
5. The motor and the rechargeable battery have a limited service life.
6. Using the product near a television or radio may cause audio noise or interference.

Storage

Do not store the product with the battery fully charged or completely empty. Rechargeable batteries naturally lose voltage over time. Charge the battery approximately once every 6 months. If the battery enters an over-discharged (low voltage) state, the capacity may not recover even after repeated charging and discharging. For long-term storage, keep the battery at approximately 50% capacity and store it at room temperature.

Troubleshooting

Symptom	Cause	Solution
Fan does not rotate and lamp does not turn solid white.	Battery may be critically low.	Connect USB cable and charge.
Fan speed fluctuates between low and high.		
Lamp does not turn red during charging.	USB power source may be off.	Check power source.
Charging takes too long. Fan stopped during charging.	USB power source output may be too low.	Use a 5 V/500 mA or higher power source.
Fan does not rotate normally even after charging. / Charging time is short. / Fan operation time is short.	Motor or battery may have reached end of service life.	Motor or battery may be worn out. Discontinue use.
Main unit becomes hot.	Product may become slightly warm during charging or while in High or Turbo mode.	Discontinue use if the product becomes too hot to touch.