USB充電式モバイルファン
取扱説明書

お買い上げいただきありがとうございます。
お使いになる前にこの取扱説明書をよくお読みのうえ、
正しくお使いください。
お読みになった後もお手元に保管して、必要に応じてご覧ください。

製造/発売元
株式会社キングプリンターズ
〒555-0013　大阪府大阪市西淀川区千舟2-10-21
https://kingprinters.com/

保証書　※印は販売店記入

※品名・型番

※保証期間　お買い上げ　　年　月　日より　1年間

お客様　お名前　　様

ご住所

電話番号

※販売店印（所在地、店舗名、電話番号）

製品仕様

充電池寿命	約300回	電源ランプ	白色LED
充電時間	約6時間	充電ランプ	赤色LED
連続使用時間	弱：約10時間 中：約5時間 強：約2時間 ターボ：約30分	点灯…充電中/点滅…充電切れ予告	
		本体サイズ	H214xW85xD40
		質量	約150g

付属品/USBケーブル 1本、ストラップ 1個、取扱説明書・保証書 本書

保証について

取扱説明書にそった正常なご使用状況で、万が一保証期間内に故障がおきた場合、本保証書を添えてお買い上げの販売店にご持参くだされば、修理可能な場合は無料修理致します。

必ず※印欄の記入・捺印をお確かめのうえ大切に保管してください。

- 本保証書の発行によりお客様の法律上の権利を制限するものではありません。
- 部品の保有期間などアフターサービスについては、取扱説明書に記載してあります。
- この保証書は国内のみ有効です。

■販売店の方へ
この保証書は、お客様へのアフターサービスの実施と責任を明確にするためのものです。
ただし、貴店で別に保証書を発行する場合は、この限りではありません。

アフターサービスについて

次の記載事項と保証書をよくお読みの上、ご利用ください。
保証期間中の場合は、販売店の保証書が必要です。

●修理部分の保有について
修理用性能部品（回路やモーター）は製造打ち切り後、5年間を基準に保有しています。修理の内容によっては、現品交換で対応させていただくことがあります。

●修理可能期間について
無料保証期間が過ぎても、この製品の性能部品保有期間中は、原則として有料修理が可能です。

この製品のサービスおよび技術サポートは
日本国内でのみ利用可能です。

お問い合わせ先　お客様相談室 **0120-000-000**（フリーダイヤル）
受付時間9:00~17:00（土日、祝日および当社休日を除く）

安全にお使いいただくために

ここに示した注意事項は、あなたや他の人への危害や損害を未然に防ぐためのものです。必ず守ってください。

図記号→ ⊗は、してはいけないことを示しています。
❗は、指示する行為を必ず守ることを示しています。

危険 死亡または重傷を負う差し迫った危険の発生が想定される内容

⊗下記のような場所では使わない
・ストーブなどの暖房機器や火気の近く。
・可燃性のシンナー、ガスを使用している近く。

⊗接続端子部に針金などの金属を差し込んだりしない
・火災や感電などの原因になります。

警告 死亡または重傷などを負う可能性が想定される内容

⊗火気に向けて使用しない
⊗不要な分解や改造をしない
❗故障や破損した状態で使わない
❗充電池の液漏れが起きたときは、素手でさわらない

注意 傷害を負う可能性または物的損害が発生する可能性が想定される内容

⊗内部に指や異物を入れない
⊗充電するときは、DC5Vを超える充電器や周辺機器を使わない
❗落下させたり衝撃を与えない
⊗下記のような場所では使わない
・直射日光が当たる所。
・強い磁気が発生する所。
・雨などの水滴がかかる所。

製品の廃棄について

Li-ion


リチウムイオン電池はリサイクルできます。
本製品を廃棄するときには、リチウムイオン電池を取り外してリサイクル協力店へお持ちください。分別した本体の廃棄については、お住まいの地区自治体の指定に従ってください。

充電池：リチウムイオン電池の取り外し


本体を分解すると、再び組み立てができない構造になっておりますので、充電池の取り出しは廃棄時以外には行わないでください。

充電池は完全に使い切った（放電した）状態にしてから取り出してください。


❶本体背面の4カ所のねじを取り出す
製品背面にある4カ所のねじをプラスドライバーで取り外してください。
ねじはファン部の付け根に2カ所、カラビナ側のクッションの下に2カ所あります。

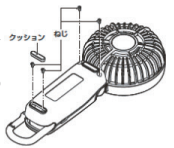

❷前後カバーを分離する
4カ所のねじを取り外したら、前カバーと後カバーを分離します。ハンドル部は2個のツメで固定されていますので、カラビナ部側を引きはがすように強く引っ張って分離してください。




❸充電池を持ち上げ、コネクタを本体から取り外す
充電池は前カバーのハンドル部内側に両面テープで接着されており、引き剥がす際に多少力が必要なことがあります。充電池を引き剥がす前にコネクタが取り外せる場合は、先に取り外してください。
※コネクタは、コネクタとコネクタのツメ上部をつまみながら上に引き抜いてください。

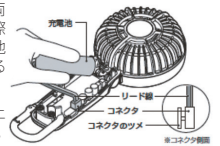

❹充電式電池リサイクル協力店に持ち込む
取り外した充電池のコネクタは、ビニールテープなどで巻いて絶縁してください。

危険
・工具の扱いに不慣れな方に充電池を取り外す作業をさせないけがの原因になります。
・充電池から漏れた液が目や皮膚についたら、すぐに水道水でよく洗い流して医師の治療をうけてください
目に障害が発生する原因になります。

各部の名称と役割

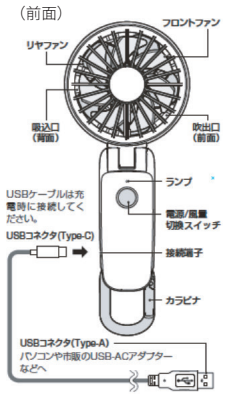

■USBコネクタの扱いかた



注意

- ●専用のUSBケーブル以外を使用したり、専用のUSBケーブルを他の機器に転用しないでください。
- ●USBコネクタの向きに注意してください。
- ●付属の専用USBケーブルは充電以外の用途には使えません。
- ●破損したUSBケーブルは使用しないでください。

お手入れについて

●電源がOFFの状態で、USBケーブルを取り外して行ってください。

●汚れがひどいときは、水でうすめた中性洗剤や石けん水を、やわらかい布に少量つけてふき取り、その後、からぶきしてください。

警告 水洗いをしたり、水などの液体でぬらさないでください。

注意 ご使用中や充電中に製品のお手入れをしないでください。

電源/風量切換スイッチの操作について

本文中の表記	操作方法	用途
短押し	押してすぐ離す（1秒未満）	風量の切り替え
長押し1秒	約1秒間押し続けてから離す	電源ON/OFF

ご使用方法

初めて使用するときや使用間隔が空いているときは、使用する前に必ず充電を行ってください。
充電池の特性として、電池を使用しない状態でも自己放電により電池残量が少なくなります。

1.充電について

ファンが回転しているときに、充電が必要になるとランプが赤く点滅します。ランプが赤く点滅したら、ファンの電源をOFFにして、本体と付属のUSBケーブルを市販のUSB-ACアダプターやパソコンなどのUSB接続端子などに接続して充電してください。

■電源/風量切換スイッチと充電状態について

電源/風量切換スイッチ	OFF	弱	中	強	ターボ
充電状態	約6時間で満充電	発熱や電池劣化の原因に		全てファンの駆動に使用されるため、充電は不可	

※充電中に「強」「ターボ」モードにしたり、「強」「ターボ」モードの状態でUSB充電を行うと、回路保護のため、最大10分でファンの駆動が停止します。

■ランプの色について

・ファンが回転→ランプが白く点灯　・赤く点滅→以下の指示に従ってください。

充電池でファンを回しているとき（USBケーブルを接続しない状態）
5秒間に1回赤く点滅：必要に応じて充電してください。
5秒間に2回赤く点滅：充電量が少なくなってきています。
1秒間に2回赤く点滅：充電が必要です。
赤く点灯：充電中

2.ファンの駆動と停止

電源/風量切換スイッチの長押し1秒で電源ON、風量「弱」「中」「強」「ターボ」を選択

◆電源/風量切換スイッチの長押し1秒で電源をONにすると、風量が「弱」になります。　弱 → 中 → 強 → ターボ ← OFF ← 長押し

◆風量がどの状態でも、電源/風量切換スイッチの長押し1秒で、電源がOFFになります。

●充電してもファンが回らないときは、モーターまたは充電池が寿命に達した可能性があります。

充電するときのご注意


充電するときは、周囲の温度が10～40℃の範囲内で行なってください。

警告・万が一、充電池付近が触れられないほど熱くなった場合は使用を中止してください。

注意・USBハブで充電しないでください。
・消費電力の高いものと同時に使うと正常に動作しない場合があります。

ストラップを使う

本体のカラビナに、付属のストラップを取り付けることができます。

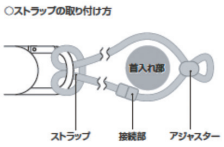

◆ストラップは接続部とアジャスターの間を通して掛けてください。

◆カラビナに取り付ける際は、接続部とアジャスターを正しい位置で取り付けてください。


◆市販のストラップを使用するときは、商品の構造と重量にあった耐荷重のものを選んでください。

警告・取り付けたストラップを強く引っ張ったり振り回すなど、無理な力は加えないでください。ストラップが首など身体に引っかかると、窒息やけがの原因になります。

注意・付属のストラップを強く引っ張らない。
・ストラップなど、ひも状のものをファンに近づけたり、布状のものをかぶせない。
・付属のストラップを他の製品に使用しない。

ファン部の角度を調整する

ファン部分は、最大約110°の範囲内で自由に調整できます。

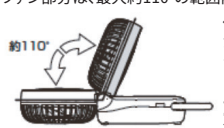

◆置いて使用する際は、水平で振動が少ない安定したところに設置してください。また、底面のクッションにほこりなどが付着した場合、振動により本体が移動することがあります。定期的にクッションに付着したほこりを取り除いてください。

注意・角度調節する際は、ファン部に強い負荷をかけない。
・角度調節する際は、ハンドル部を確実に持ち、ファン部と本体に指などを挟まないようにする。

カラビナを使う



◆カラビナを取り付けた後に製品を強く引っ張ったり、強い負荷をかけたりしない。

◆物品の吊り下げや運搬など、製品を取り付ける以外の目的で使用しない。

ご使用上の注意

1. USB給電の外付けハードディスクや携帯電話への充電などと同時に接続すると、パソコンに障害を与えることがあります。
2. 出力電圧がDC5Vを超える規格のUSB-ACアダプターやUSB出力機器を使用しないでください。
3. 電源がONの状態で羽根の動きを止めないでください。
4. 羽根が破損した状態で使用しないでください。
5. モーターや充電池には寿命があります。
6. テレビやラジオなどのそばで使用した場合、音声などにノイズが入る場合があります。

保管について

満充電状態、または電池残量のない状態での保管はしないでください。充電池は、自己放電により電圧が低下して行きますので、6ヶ月に1回程度は充電してください。充電池が過放電状態（低電圧）になると充電、放電を繰り返しても容量が回復しにくくなります。長時間保管される場合は、電池容量の半分程度の残量で常温常湿保管してください。

故障かなと思ったら

症状	原因	処置
ファンが回らない、ランプも白く点灯しない 風量が強弱を繰り返す	充電池の残量がかなり少ない可能性があります。	USBケーブルを接続して充電
充電するときにランプが赤く点灯しない	USBの給電元に電源が入っていない可能性があります。	給電元の電源を確認
充電時間が長い 充電中にファンが止まった	USBの給電元の定格出力が低い可能性があります。	5V/500mA以上の給電元で充電
充電しても 正常に回らない/充電時間が短い/ファンの回転時間が短い	モーターや充電池が寿命に達した可能性があります。	モーターや充電池の寿命ですので、使用を中止
本体が熱くなった	特性上、充電中や「強」「ターボ」での使用中は、多少熱くなることがあります。	触れられないほど熱くなった場合は使用を中止

USB Rechargeable Mobile Fan
Instruction Manual

Thank you for purchasing this product. Please read this instruction manual carefully before use to ensure correct operation. After reading, keep it in a safe place for future reference.

Manufacturer/Distributor
King Printers Co., Ltd.

2-10-21 Chibune, Nishiyodogawa-ku, Osaka 555-0013
https://kingprinters.com/

Warranty Card

Fields with * to be completed by retailer

*Product name/model

*Warranty period: 1 year from _____ / ____ / ____ (purchase date)

Customer details

Name

Address

Phone number

*Retailer stamp
(Store location, name, and phone number)

Specifications

Battery life	Approx. 300 charge cycles	Power indicator lamp	White LED
Charging time	Approx. 6 hours	Charging indicator lamp	Red LED
Continuous operation time		Solid: Charging	
Low: Approx. 10 hours		Flashing: Low battery warning	
Medium: Approx. 5 hours			
High: Approx. 2 hours		Size of main unit	H214xW85xD40
Turbo: Approx. 30 minutes		Weight	Approx. 150 g

Accessories: USB cable (×1), Strap (×1), Instruction Manual/Warranty Card (This document)

Warranty

If a failure occurs within the warranty period under normal use according to the instruction manual, the product will be repaired free of charge (if repairable). Please bring the product and this warranty card to the retailer where it was purchased.

Please ensure the fields marked with * are filled in and stamped, and keep this card in a safe place.

- This warranty does not limit the legal rights of the warranty holder.
- Information on after-sales service, such as the parts retention period, is included in this instruction manual.
- This warranty is valid only in Japan.

■ For Retailers

This warranty card is intended to clarify the responsibility and implementation of after-sales service for the customer. This does not apply if your store issues its own separate warranty.

After-Sales Service

Please read the following information and the warranty card carefully. A valid warranty card is required for service during the warranty period.

● Availability of Replacement Parts

Functional parts for repair (circuits and motors) are generally kept in stock for 5 years after production has been discontinued. Depending on the type of repair required, the entire product may be replaced instead.

● Repair Period

Even after the free warranty period has expired, paid repairs are generally possible as long as functional parts are in stock.

Service and technical support for this product are available only within Japan.

Contact Information

Customer Service Center
0120-000-000 *Toll-free within Japan*

Hours: 9:00 AM – 5:00 PM
(Excluding Saturdays, Sundays, public holidays, and company holidays)

Safety Precautions

The following instructions are intended to prevent harm to the user or others and to avoid property damage. Please follow these precautions strictly.

Symbols: "⊗" indicates an action that must NOT be done.
"❗" indicates a caution that MUST be adhered to.

DANGER Indicates an imminent risk of death or serious injury.

- ⊗ Do not use the product in the following locations:
  - Near heaters, stoves, or open flames.
  - Near flammable substances such as thinners or gas.
- ⊗ Do not insert metal objects such as wires into the charging port. Doing so may cause fire or electric shock.

WARNING Indicates a potential risk of death or serious injury.

- ⊗ Do not point the product toward open flames.
- ⊗ Do not disassemble or modify the product.
- ❗ Do not use the product if it is damaged or malfunctioning.
- ❗ Do not touch leaking battery fluid with bare hands.

CAUTION Indicates a potential risk of minor injury or physical damage to property.

- ⊗ Do not insert fingers or foreign objects inside the product.
- ⊗ Do not use chargers or peripherals that exceed 5 VDC during charging.
- ❗ Do not drop the product or subject it to strong impacts.
- ⊗ Do not use the product in the following locations:
  - Locations subject to direct sunlight
  - Near strong magnetic fields
  - Areas with exposure to rain or water droplets

Product Disposal

Li-ion

Lithium-ion batteries are recyclable. When disposing of the product, remove the lithium-ion battery and take it to a participating recycling center. For the disposal of the main unit, please follow the regulations of your local municipality.


Removing the Rechargeable Lithium-ion Battery

The product is designed so that it cannot be reassembled once taken apart. Do not remove the battery except when disposing of the product.

Ensure the battery is completely discharged before removal.


1. Remove the four screws on the back of the main unit.

Use a Phillips screwdriver to remove the four screws on the back. Two screws are located at the base of the fan head, and two screws are located under the cushions near the carabiner.

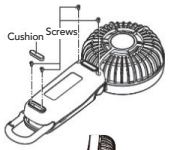

2. Separate the front and back covers.


After removing the four screws, separate the front and back covers. The handle is held together by two internal tabs. Pull firmly from the carabiner side to snap the covers apart.

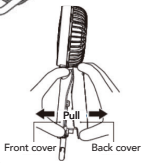

3. Lift the battery and disconnect the connector.

The battery is secured inside the handle under the front cover with double-sided tape and may require some force to peel off. If possible, unplug the connector before peeling the battery.

* To unplug the connector, pinch the connector and the top of the connector tab and pull upward.

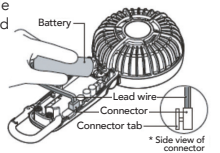


4. Take the battery to a recycling center.

Cover the battery connector with electrical tape or similar material to insulate it.


DANGER

- **Do not allow anyone unfamiliar with using tools to remove the battery.**
  Doing so may result in injury.
- **If battery fluid leaks and contacts your eyes or skin, rinse immediately with clean tap water and seek medical attention.**
  Exposure to the eyes can cause permanent damage.

Part Names and Functions

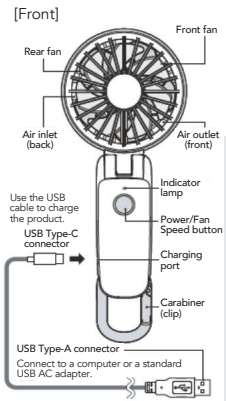

Handling the USB Connector



CAUTION

- Do not use any USB cable other than the one provided. Do not use the included cable with other devices.
- Check that the USB connector is correctly oriented before inserting it.
- Check that the USB connector is correctly oriented before inserting it.
- Do not use the USB cable if it is damaged.

Maintenance and Care

- Ensure the power is off and the USB cable is disconnected before cleaning.
- To clean heavy dirt, wipe with a soft cloth slightly moistened with mild detergent or soapy water. Wipe dry with a clean cloth immediately after.

WARNING Do not wash the product with water or allow the product to get wet.

CAUTION Do not clean the product while it is in use or charging.

Operating the Power/Fan Speed Button

Terminology	Action	Function
Short press	Press and release immediately (less than 1 second)	Cycles through fan speeds.
Press and hold (1 second)	Pres and hold for approx. 1 second,then release	Turns the power on or off

How to Use

Always charge the battery before using the product for the first time or after a long period of disuse.
Due to the characteristics of rechargeable batteries, the charge will naturally decrease over time even when not in use.

1. Charging the Product

When the fan is running and the battery is low, the indicator lamp will flash red. If the lamp flashes red, turn the power off and connect the included USB cable to a power source, such as a computer or a standard USB AC adapter.

Power/Fan Speed Button & Charging Status

Power/Fan Speed button	OFF	Low	Medium	High	Turbo
Charging status	Full charge in approx. 6 hours	May cause heat or battery damage		No charging during use; all power is used to run the fan	

* If High or Turbo mode is used while charging, or if the charging cable is connected while the product is in High or Turbo mode, the fan will stop within 10 minutes to protect the circuit.

Indicator Lamp Colors

- Solid white: The fan is running.
- Flashing red: See the instructions below.

When running on battery (USB cable disconnected)
Flashing once every 5 seconds: Low battery. Charge as needed.
Flashing twice every 5 seconds: Very low battery. Charge soon.
Flashing twice every 5 seconds: Very low battery. Charge soon.
Solid red: Charging

2. Operating the Fan

Press and hold the Power/Fan Speed button for 1 second to turn on the power. Press the button again to switch between Low, Medium, High, and Turbo mode.

◆When the power is turned on by pressing and holding the Power/Fan Speed button for 1 second, the fan starts at Low speed.



◆Pressing and holding the Power/Fan Speed button for 1 second again will turn off the power, regardless of the current fan speed.

●If the fan does not rotate even after charging, the motor or rechargeable battery may have reached the end of its service life.

Precautions for Charging

Charge within an ambient temperature range of 10°C to 40°C.


WARNING ●If the area near the rechargeable battery becomes too hot to touch, stop using the product immediately.

CAUTION ●Do not charge using a USB hub.
●The product may not operate correctly if used simultaneously with high-power-consumption devices.

Using the Strap

The included strap can be attached to the carabiner on the product.

○How to Attach the Strap



◆When hanging the product from the neck, be sure to hang it from the opening that includes the strap connector and adjuster.

◆When attaching the strap to the carabiner, ensure the connector and the adjuster are in the correct positions.

◆When using a commercially available strap, choose one with a load capacity suitable for the product's structure and weight.

WARNING ●Do not apply excessive force to the strap such as by pulling it strongly or using the strap to swing the product. There is a risk of suffocation or injury if the strap gets caught around the neck or body.

CAUTION ●Do not pull on the included strap with a strong force.
●Do not allow the strap or other strings near the fan, and do not cover the fan with cloth.
●Do not use the included strap for other products.

Adjusting the Fan Angle

The fan head can be freely adjusted within a range of up to approximately 110°.



◆When using the fan on a surface, place it in a stable, level location with minimal vibration. Dust or debris on the cushion on the bottom may cause the product to move due to vibration. Regularly remove any dust from the cushion.

CAUTION ●Do not apply excessive force to the fan head when adjusting the angle.
●When adjusting the angle, hold the handle firmly and be careful not to pinch your fingers between the fan head and the main body.

Using the Carabiner



◆Do not pull strongly on the product or apply a heavy load after attaching the carabiner.

◆Do not use the carabiner for any purpose other than attaching the product, such as hanging or transporting other items.

Precautions for Use

1. Connecting this product to a computer simultaneously with other USB-powered devices (such as external hard drives or mobile phones) may damage the computer.
2. Do not use USB AC adapters or USB output devices with a voltage exceeding 5 VDC.
3. Do not forcibly stop the fan blades while the power is on.
4. Do not use the product if the fan blades are damaged.
5. The motor and the rechargeable battery have a limited service life.
6. Using the product near a television or radio may cause audio noise or interference.

Storage

Do not store the product with the battery fully charged or completely empty. Rechargeable batteries naturally lose voltage over time. Charge the battery approximately once every 6 months. If the battery enters an over-discharged (low voltage) state, the capacity may not recover even after repeated charging and discharging. For long-term storage, keep the battery at approximately 50% capacity and store it at room temperature.

Troubleshooting

Symptom	Cause	Solution
Fan does not rotate and lamp does not turn solid white.	Battery may be critically low.	Connect USB cable and charge.
Fan speed fluctuates between low and high.		
Lamp does not turn red during charging.	USB power source may be off.	Check power source.
Charging takes too long. Fan stopped during charging.	USB power source output may be too low.	Use a 5 V/500 mA or higher power source.
Fan does not rotate normally even after charging. / Charging time is short. / Fan operation time is short.	Motor or battery may have reached end of service life.	Motor or battery may be worn out. Discontinue use.
Main unit becomes hot.	Product may become slightly warm during charging or while in High or Turbo mode.	Discontinue use if the product becomes too hot to touch.

USB Rechargeable Mobile Fan
Instruction Manual

Thank you very much for purchasing this product.
Before use, please read this Instruction Manual carefully to ensure proper operation. Please keep it handy after reading so you can refer to it as needed.

Manufacturer/Vendor
King Printers Co., Ltd.

2-10-21 Chibune, Nishiyodogawa-ku, Osaka City, Osaka 555-0013
https://kingprinters.com/

Warranty Certificate

* Fields to be filled by the shop

* Product Name/Model Number

* Warranty Period: 1 year from the date of purchase (YYYY/MM/DD)

Purchaser
Name
Address
Phone number

*Retailer Stamp
(Address, Store Name, Phone Number)

Product Specs

Battery Life	Approx. 300 cycles	Power Indicator	White LED
Time to Charge	Around 6 hours	Charging Lamp	Red LED
Continuous Usage Time		Solid... Charging	
	Low: About 10 hours	Flashing... Low battery warning	
	Medium: About 5 hours		
	High: About 2 hours	Dimensions	H214xW85xD40
	Turbo: About 30 minutes	Weight	Approx. 150g

Included Accessories / 1 USB cord, 1 Strap, Operating Manual/Warranty Certificate (This booklet)

About the Warranty

In the unlikely event of a malfunction during the warranty period under normal use according to the instruction manual, please bring this warranty certificate to the shop where you bought the product, and we will repair it for free if it is repairable.

Make sure the fields marked with * are filled in and stamped, and keep this warranty in a safe place.

- The issuance of this warranty does not restrict your legal rights.
- After-sales services, such as the retention period for parts, are described in the operating instructions.
- This warranty certificate is valid only within Japan.

■ For Retailers

This certificate clarifies the implementation and responsibility of after-sales support for the customer. However, this does not apply if the store issues a separate warranty.

Regarding After-Sales Service

Please read the following details and the warranty certificate carefully before use. If it is within the warranty period, the dealer's warranty certificate is required.

● Retention of Repair Parts

Performance parts for repair (circuits and motors) are kept for a standard of 5 years after production ends. Depending on the nature of the repair, we may respond by exchanging the actual product.

● About the Repair Period

Even after the free guarantee expires, paid repairs are generally possible for as long as we retain the performance parts for this product.

Service and technical assistance for this item are only available within Japan.

Contact Information *Consumer Support Center*
0120-000-000 *Toll-Free Number*
Hours: 9:00 AM – 5:00 PM
(excluding weekends, holidays, and company holidays)

For Your Safety

The precautions listed here are intended to prevent injury to yourself and others or damage. Please be sure to observe them.

Symbols: "⊗" indicates something you must not do.
"❗" indicates an instruction that must be strictly followed.

DANGER Content assuming imminent danger resulting in death or serious injury

⊗ Do not use in the following places
- Near heating appliances like stoves or open flames.
- Near the use of flammable thinner or gas.

⊗ Do not insert metal objects like wire into the connection terminal.
It may cause fire or electric shocks.

Warning Situations where there is a potential for death or severe injury

⊗ Do not direct towards fire.
⊗ Avoid unnecessary disassembly and modification.
❗ Do not operate if malfunctioning or damaged.
❗ If the charging battery leaks, do not touch it with bare hands.

Caution Content assuming potential injury or property damage

⊗ Never stick fingers or foreign objects inside.
⊗ When charging, avoid using chargers or peripherals exceeding DC 5V.
❗ Do not drop it or apply strong impact.
⊗ Do not use in locations such as the following
- Places exposed to direct sunlight.
- Areas where strong magnetism is generated.
- Places where it might get splashed by rain or water drops.

Disposing of the Product

Li-ion

Lithium-ion batteries are recyclable.
When throwing away this product, remove the lithium-ion battery and bring it to a cooperating recycling shop. For the disposal of the separated main body, please follow the regulations of your local municipality.


Rechargeable Battery: Removing the Lithium-ion Battery

Once the main unit is taken apart, it cannot be reassembled, so do not extract the battery pack except when disposing of it.

Ensure the rechargeable battery is completely used up (discharged) before removing it.


❶ Take out the 4 screws on the back of the device

Use a Phillips screwdriver to remove the four screws on the back of the product. There are two screws at the base of the fan part and two under the cushion on the carabiner side.

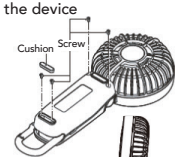

❷ Separate the front and back covers


After removing the 4 screws, separate the front panel and rear panel. The handle section is secured by 2 tabs, so pull strongly to peel apart the carabiner side and separate them.

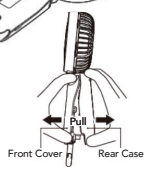

❸ Lift the battery and disconnect the connector from the unit

The battery pack is glued to the inside of the handle of the front cover with double-sided tape, and peeling it off may require some force. If the connector can be disconnected before pulling off the battery pack, please remove it first.

* For the connector, pinch the connector and the upper part of its tab while pulling it upwards.

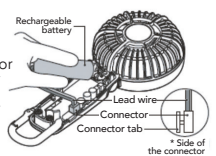


❹ Bring to a cooperating store for rechargeable battery recycling

Insulate the connector of the removed battery by wrapping it with vinyl tape, etc.

DANGER

- **Do not let anyone unfamiliar with tools perform the battery removal.**
  It can result in physical injuries.
- **If liquid leaking from the internal battery gets into your eyes or onto your skin, rinse immediately with tap water and seek medical attention.**
  It could cause visual impairment.

Names and Functions of Parts

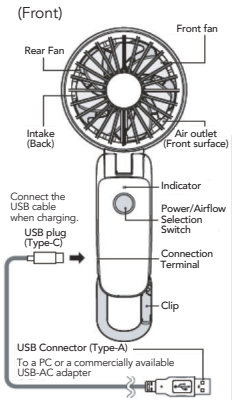

How to handle the USB plug

Good example　Bad example



Caution

- Do not use anything other than the dedicated USB cable, and do not use the dedicated USB cable for other devices.
- Be careful of the orientation of the USB connector.
- The included dedicated USB cable cannot be used for purposes other than charging.
- Do not use a damaged USB cable.

About Maintenance

- Please perform maintenance with the power OFF and the USB cord removed.
- If the product is very dirty, apply a small amount of neutral detergent diluted with water or soapy water to a soft cloth, wipe it off, and then wipe it with a dry cloth.

Warning　Do not wash with water or get it wet with liquids such as water.

Caution　Do not clean the product while it is in use or charging.

Regarding the operation of the Power/Fan Speed Switch

Notations in the text	Operation method	Application
Short press	Press and release immediately (less than 1 second)	Switches the wind speed
Long press, 1 sec	Keep pressing for about 1 sec and release	Power ON/OFF

How to Use

Always charge before using for the first time or after a long period of non-use.

As a characteristic of rechargeable batteries, the battery level decreases due to self-discharge even when not in use.

1. About Charging

When the fan is rotating and charging is required, the light blinks red. If the indicator flashes red, turn off the fan, and connect the device and the included USB cord to a commercially available USB-AC adapter or a USB connection terminal on a PC to charge.

Power/Airflow switch and charging status

Power/Airflow Selection Switch	OFF	Low	Med	High	Turbo
Charging status	Fully charged in about 6 hours	Causes heat generation and battery degradation		Charging is impossible because all power is used to drive the fan.	

*If you set the mode to "High" or "Turbo" during charging, or perform USB charging while in "High" or "Turbo" mode, the fan will stop in less than 10 minutes to protect the circuit.

About the lamp color


- Fan rotates -> LED lights up white
- Flashing red -> Follow the instructions below.

When running the fan on battery power (USB line disconnected)
Flashes red once every 5 seconds: Charge as needed.
Flashes red twice every 5 seconds: Battery is getting low.
Flashes red two times a second: Charging is necessary.
Solid red: Charging

2. Starting and stopping the fan

Long press the Power/Fan switch for 1s to turn ON, and select "Low", "Medium", "Strong", or "Turbo" for wind volume.

◆When the power is turned on by long-pressing the power/airflow switch for 1 second, the airflow becomes "Low".



◆Regardless of the wind speed, the power turns OFF when the power/airflow switch is long-pressed for 1 second.

●If the fan does not turn even after charging, the motor or battery may have reached the end of its life.

Precautions when charging

Please charge within an ambient temperature of 10 to 40 degrees Celsius.


Warning　●In the unlikely event that the area near the battery becomes too hot to touch, stop using it.

Caution　●Do not charge with a USB hub.
●It may not operate normally if used at the same time as something with high power consumption.

Using the strap

You can attach the included lanyard to the carabiner on the main unit.

○How to attach the strap



◆Hang the strap through the space between the connection part and the adjuster.

◆When attaching to the hook, install the connection part and adjuster in the correct position.


◆When using a commercially available strap, please choose one with a load capacity suitable for the structure and weight of the product.

Warning　●Do not apply excessive force, such as pulling strongly or swinging the attached strap. If the strap gets caught on your body, such as your neck, it can cause choking or injury.

Caution　●Do not pull the provided strap strongly.
●Do not bring string-like objects such as straps close to the fan or cover it with cloth-like items.
●Do not use the included strap for other items.

Adjusting the angle of the fan part

The blower section can be freely adjusted within a maximum range of approximately 110 degrees.



◆When using it while on a surface, place it on a stable, horizontal surface with little vibration. In addition, if dust or the like adheres to the pad on the bottom, the device may move due to vibration. Periodically remove the dust attached to the cushion.

Caution　●Do not apply excessive force to the fan head when adjusting the angle.
●When adjusting the angle, hold the handle securely to avoid pinching fingers between the fan and the body.

Using the clip



◆Do not pull the product strongly or apply a strong load after attaching the carabiner.

◆Do not use it for purposes other than attaching the product, such as hanging or carrying goods.

Usage Precautions

1. Connecting it at the same time as a USB-powered external hard disk or while charging a mobile phone may cause a computer failure.
2. Do not use USB-AC adapters or USB output devices with standards where the output voltage exceeds DC 5V.
3. Do not stop the movement of the blades while the power is ON.
4. Do not use if the blades are damaged.
5. The motor and internal battery have a limited lifespan.
6. If used near a TV or radio, noise may be mixed into the audio.

About Storage

Do not store in a fully charged state or a state with no battery remaining. The voltage of the rechargeable battery decreases due to self-discharge, so please charge it about once every 6 months. If the battery enters an over-discharged state (low voltage), it will be difficult to recover the capacity even if charging and discharging are repeated. When storing for a long time, store at room temperature with about half of the battery capacity remaining.

Troubleshooting

Symptom	Cause	Solution
Fan does not spin, and the lamp does not light white Wind volume repeatedly gets stronger and weaker	The remaining battery power may be very low.	Connect the USB cord to charge
The indicator does not light up red when charging	The USB power supply source might not be turned on.	Check the power of the supply source
Charging takes a long time Fan stopped during charging	The rated output of the USB power source may be low.	Charge with a power supply of 5V/500mA or more
Does not spin properly even when charged / Short charging time / Short fan rotation time	The motor or battery pack may have reached the end of its life.	Stop using as it is the end of the motor or rechargeable battery's life
The unit became hot	Due to the characteristics of the battery, it may become slightly hot during charging or while using "High" or "Turbo".	Discontinue use if it becomes too hot to touch